




Labeling Tricks

Here are some tried and true tricks that will keep your P-Touch tapes from jamming...

- 1) **Before inserting a tape** - whether it's brand *new or partially used* - look at the side of the cassette to be sure the tape extends out to the end of the cassette and under the hold-down bar. (See TC tape below.)
- 2) Be sure to **wind the ink ribbon hole** a couple of turns with your finger **in the direction of the arrow on the cassette**. (See TX tape below.) This takes up slack from shipping or partial use. **Do this before you put in any tape - new or used.**

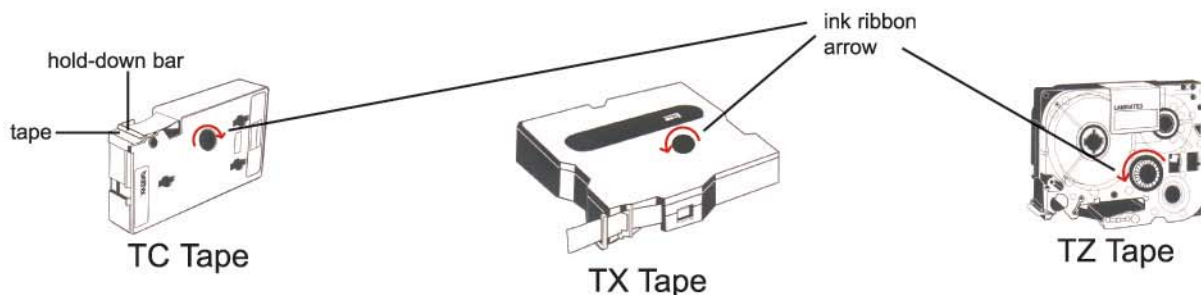

- 3) Be sure when placing the cassette in the labeler, that none of the ink ribbon bunches up as you snap it in place. **It has to go straight down into the machine.** If it does bunch up, take it back out and repeat step 2.
- 4) Before you key in your first label, **press "code + feed"** (on most machines - see your manual) to make sure everything's feeding right.
- 5) **Never pull on the tape!**
Pulling on the tape can cause the ink ribbon to stick to the adhesive backing at the hold-down bar and get all stuck up.
What a mess! (See how out Lab Testers have proven this.)
- 6) Why buy P-Touch and Bag Tags from ProTag?
Fast Shipping
Best Availability
Low Prices
Easy to order on the phone or email prohelp@protag.com



Our BagTags and P-Touch are Lab Tested TM

ProTag.

16 Barclay Hills Drive
Wilmington, NC 28405 USA

800-777-6825